
型号	尺寸	材质	比例	设计	设计时间	修改内容	修改时间
OS-0480 英文说明书	双面印风琴折 95*142mm	80g铜版纸	1:1	徐海洲	2021-05-20		

5. Short press the function button to set the liquid dosage, when you approach your hands in the sensing area, the three-segment breathing light will blink the corresponding gear as below:

Short press the button	Liquid Dosage		Three-segment	//
	Foam	Spray	breathing light	T2/
ı	0.2-0.3ml	0.3ml	- <u>©</u> -	
II	0.6-0.7ml	0.6ml	- <u>O</u>	/ / / / /
III	1.0-1.1ml	1ml	0 0	





Disassemble Rotate counterclockwise to remove








Assemble



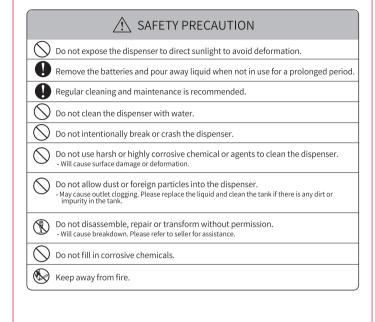

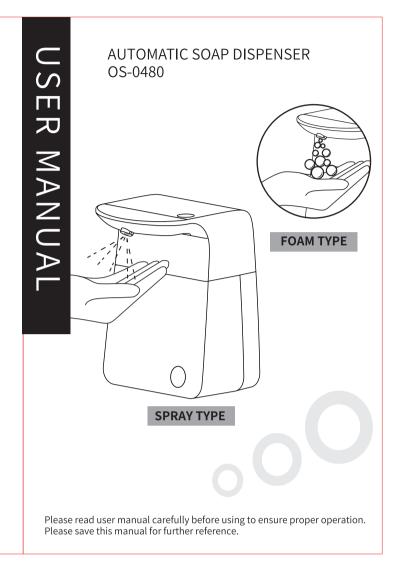


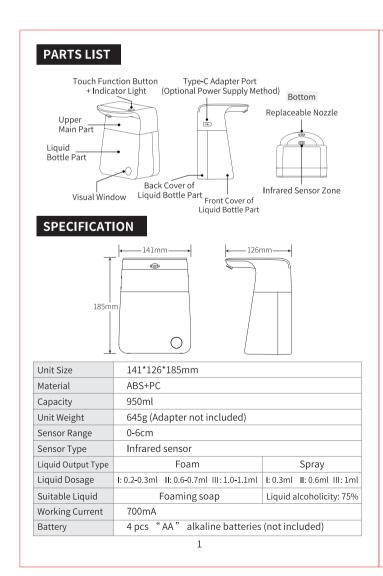

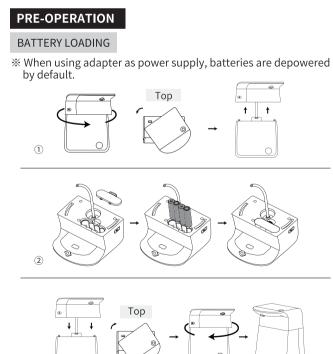

- picture. 2. Remove the battery compartment cap and insert 4 pcs "AA" alkaline
- batteries, then load back the cap. 3. Install the upper main part back to the liquid bottle part and rotate it
- clockwise as shown in the picture, the installation is complete when the two parts match each other.




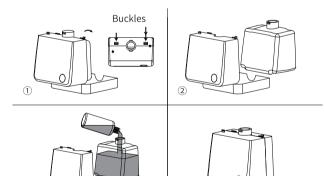

- 1. Press down two buckles and open the back cover as shown in the picture;
- 2. Take out the liquid bottle;
- 3. Fill in suitable liquid;
- 4. Install the liquid bottle inside the front cover and close up the back cover.


## WALL MOUNTING OPTION

Please install the dispenser appropriately to avoid any moisture or water.




- 1. Make two drilling marks with 60mm distance;
- 2. Drill the mounting holes and insert expansion plugs and screws; 3. Install the dispenser onto the screws on the wall.


## **READY FOR USE**

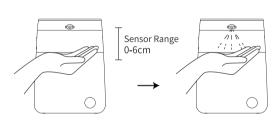


Please do not expose the sensor to strong sunlight. Prime the dispenser  $\,$ by inducting several times to let the air out for first use.

- 1. Long press the function button for 2 seconds to turn on the dispenser, the three-segment breathing light will blink white segment by segment, the default liquid dosage is I. (Pic 1)
- 2. When standby, approach your hands in the sensing area, the white breathing light will blink according to liquid dosage setting, 1 segment to indicate liquid dosage I. (Pic 2)
- 3. When under low battery condition, the three-segment breathing light will blink red every 3 seconds. (Pic 3)
- 4. Long press the function button for 2 seconds to turn off the dispenser, the three-segment breathing light will blink white for 2 seconds to indicate power off.
- $\divideontimes$  ATTENTION: The sensor has no reaction on dark or black objects.







Mounting Holes Distance Measurement for Wall Mounted Installation